USER GUIDE · PIPE CLAMP W/ ADJUSTABLE BRACKET



Pipe Support

INTENDED USE

Provides support for a pipe and keeps it in place.

Adjustable vertical range = +25 /-15 mm. Pre-set Height = 100 mm.

INSTRUCTION FOR USE

Install the pipe clamp with the welded bracket on to the pipe, making sure that it's positioned correctly according to the bolt holes of the channel you're connecting to.

Add the lower bracket and adjust to desired height by sliding the lower bracket up and down. Add two M10 bolts and nuts, secure tightly.

Then insert two M10 bolts through the baseplate and channel and secure with nuts.









