


INTENDED USE

This table summarizes the radius of our SPB-RF40 Flexi Riser FR1 to FR4.


Use this guide to identify how many segments you need for your given radius requirements.

For installation instructions please see ØI-RD-UG-EN-0389.

Description	#	Radius of Riser (mm)							
		90°		60°		45°		30°	
		Inside Riser	Outside Riser	Inside Riser	Outside Riser	Inside Riser	Outside Riser	Inside Riser	Outside Riser
SPB-RF40 FR1	1	320	280	490	450	650	610	970	930
SPB-RF40 FR2	2	490	450	730	690	970	930	1450	1410
SPB-RF40 FR3	3	650	610	970	930	1290	1250	1930	1890
SPB-RF40 FR4	4	810	770	1210	1170	1610	1570	2410	2370

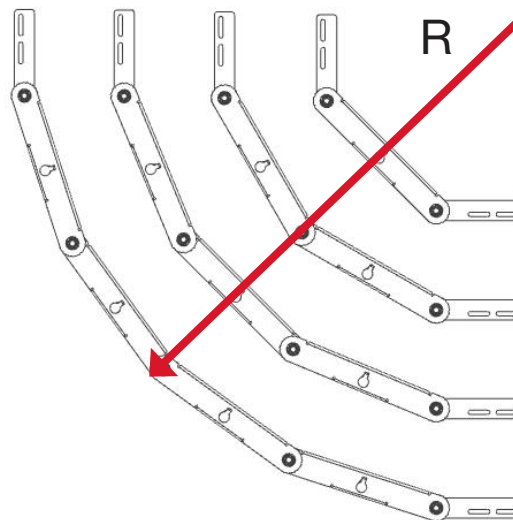

Inside riser 90° - FR1 to FR4

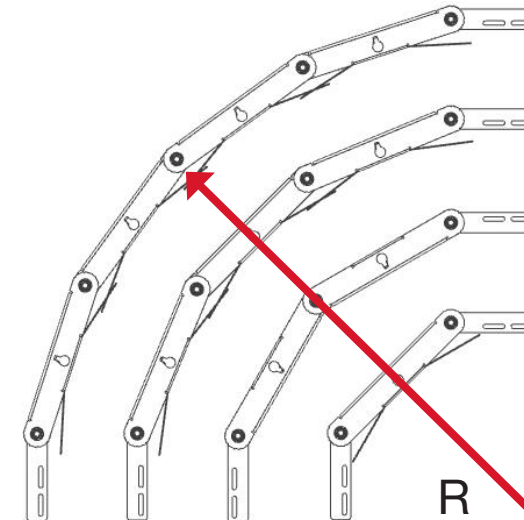

Outside riser 90° - FR1 to FR4