

INTENDED USE






Accessory used with clamped shoes to give the Line guide and Hold down function with 3 mm gap. For shoe with baseplate 10 mm (LG05-A) and 15 mm (LG05-B) thick.

INSTRUCTION FOR USE

Use 4x M10 bolts to fasten the plate to the Mekano® channel of choice.
For CH 125-2T5, use 4x M12 bolts with the corresponding part for that channel.

It is recommended to fasten the clamped shoe on to the pipe first and rest it on the channel, then thread this part on the baseplate of the shoe and fasten it.

Nonie™ Principle allows for 5 mm adjustments on square holed channels by moving the bolts over to the next hole on the adapter.

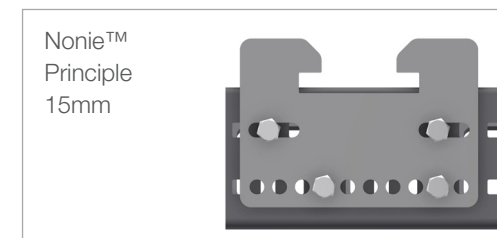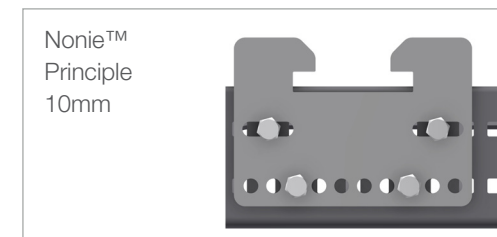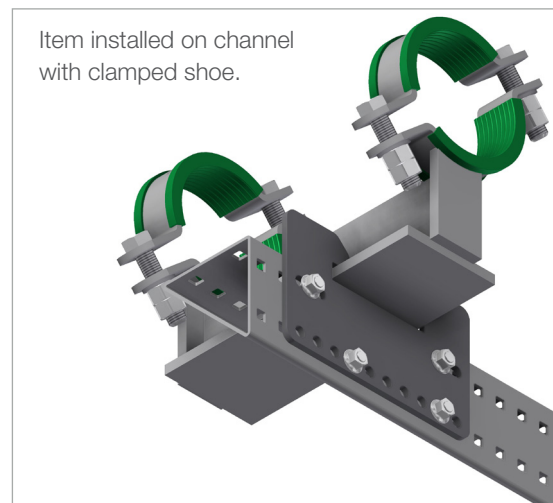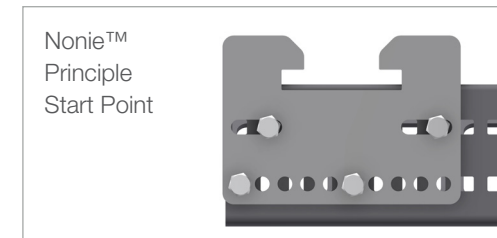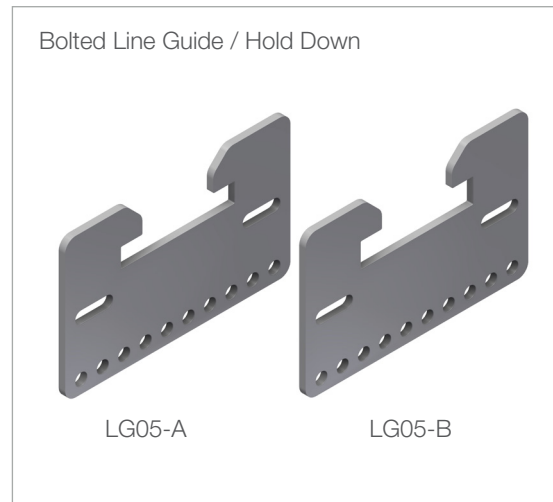

User Guide for Bolts:
Recommended Torque